



Blink an LED from Pico-8!



Open Console Press ESC, choose "Exit to Console"



Load Blink Program Type "load blink.p8", press return

+



Code Editor Press ESC to toggle between Console and Editor



Run Blink Program! ESC to enter Console, type "run", press Return.

:::::: PICO-8 CONSOLE ::::: Type splore to return to splore Type Help For Help > Run

Edit Blink Program! Try changing any of the values below. Then, Run program with new changes.

Change the Background Color!	Change the Size of the Circle!
CLS(9) to	CIRCFILL(64,64,10,VAL/11) to
CLS(14)	CIRCFILL(64,64,30,VAL/11)
Connect the LED to GPIO2!	Change the Blink Rate!
POKE(0X5F82, VAL) to	T += 0.05 to
POKE(0X5F83, VAL)	T += 0.1