

Table 1 (Page 1 of 2). Advanced System Management Adapter (ASMA) Feature Summary

Server Model	ASMA Included?	System Status and ASMA Configuration?	System Environmental Monitors (Temperature, Voltage)?	ASMA Environmental Monitors (Temperature, Voltage)?	Automated Restart and Alerting (Watchdog Timers)?	Dial-out Alerting (Modem, Pager)?	ASMA Error/Event Log?	Remote Power On/Off/Reset?	Remote POST Console?	Remote Diagnostics?	Security (User Profiles, Passwords, Dial-back Capability)?	Netfinity Manager Support?	ANSI Terminal Support?	BIOS Level Required
<b>Entry</b>														
PC Server 310/315	Option	Yes	N/A	Yes	With Power Brick *	Yes	Yes	With Power Brick	N/A	N/A	Yes	Yes	Yes	N/A
PC Server 320/520 EISA	Option	Yes	N/A	Yes	With Power Brick *	Yes	Yes	With Power Brick	N/A	N/A	Yes	Yes	Yes	N/A
Netfinity 3000/3500	Option	Yes	N/A	Yes	With Power Brick *	Yes	Yes	With Power Brick	N/A	N/A	Yes	Yes	Yes	N/A
<b>Mainstream</b>														
PC Server 325/330	Option	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	N/A	Yes	Yes	Yes	40A or later
PC Server 325 (PT0, PTW, PB0, RB0, 1RY)	Option	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	12A or later
PC Server 330 (PM0, PT0,PB0,11Y)	Option	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	12A or later
PC Server 325 (2RY) or 330 (21Y)	Standard	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	12A or later
<b>High End</b>														
PC Server 704 **	Option	Yes	N/A	Yes	With Power Brick *	Yes	Yes	With Power Brick	N/A	N/A	Yes	Yes	Yes	N/A

Table 1 (Page 2 of 2). Advanced System Management Adapter (ASMA) Feature Summary

Server Model	ASMA Included?	System Status and ASMA Configuration?	System Environmental Monitors (Temperature, Voltage)?	ASMA Environmental Monitors (Temperature, Voltage)?	Automated Restart and Alerting (Watchdog Timers)?	Dial-out Alerting (Modem, Pager)?	ASMA Error/Event Log?	Remote Power On/Off/Reset?	Remote POST Console?	Remote Diagnostics?	Security (User Profiles, Passwords, Dial-back Capability)?	Netfinity Manager Support?	ANSI Terminal Support?	BIOS Level Required
Netfinity 7000 ***	Standard	Yes	Partial	Yes	Yes	Yes	Yes	Yes	Yes	N/A	Yes	Yes	Yes	N/A

**Note:**

- \* OS Hang only. POST Completion Watchdog timer is not supported.
- \*\* Requires Cable Option PN 94G6970 (FRU 76H6828).
- \*\*\* Must be cabled to system board. Cable is included with system.

Use of the Advanced System Management Adapter on the following systems is **not** supported:

- Server 85
- Server 95
- PC Server 320 (Microchannel)
- PC Server 500
- PC Server 520 (Microchannel)
- PC Server 720

**01K7667**

Printed in the U.S.A.

© Copyright International Business Machines Corporation 1998. All rights reserved.

Note to U.S. Government Users — Documentation related to restricted rights — Use, duplication or disclosure is subject to restrictions set forth in GSA ADP Schedule Contract with IBM Corp.

IBM reserves the right to change specifications or other product information without notice. This publication could include technical inaccuracies or typographical errors. References herein to IBM products and services do not imply that IBM intends to make them available in other countries. IBM PROVIDES THIS PUBLICATION AS IS WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties, therefore this disclaimer may not apply to you.